

CONTROL SWITCH &
STATUS INDICATOR
LIGHT


CIRCUIT
BREAKERS

AIR CLEANER
COVER

ALTITUDE ADJUST
KNOB—GASOLINE,
HGJAB, HGJAC

MAINTENANCE
ACCESS COVER

RUBBER GROMMET
(1 OF 2) TO SECURE
ACCESS COVER PINS

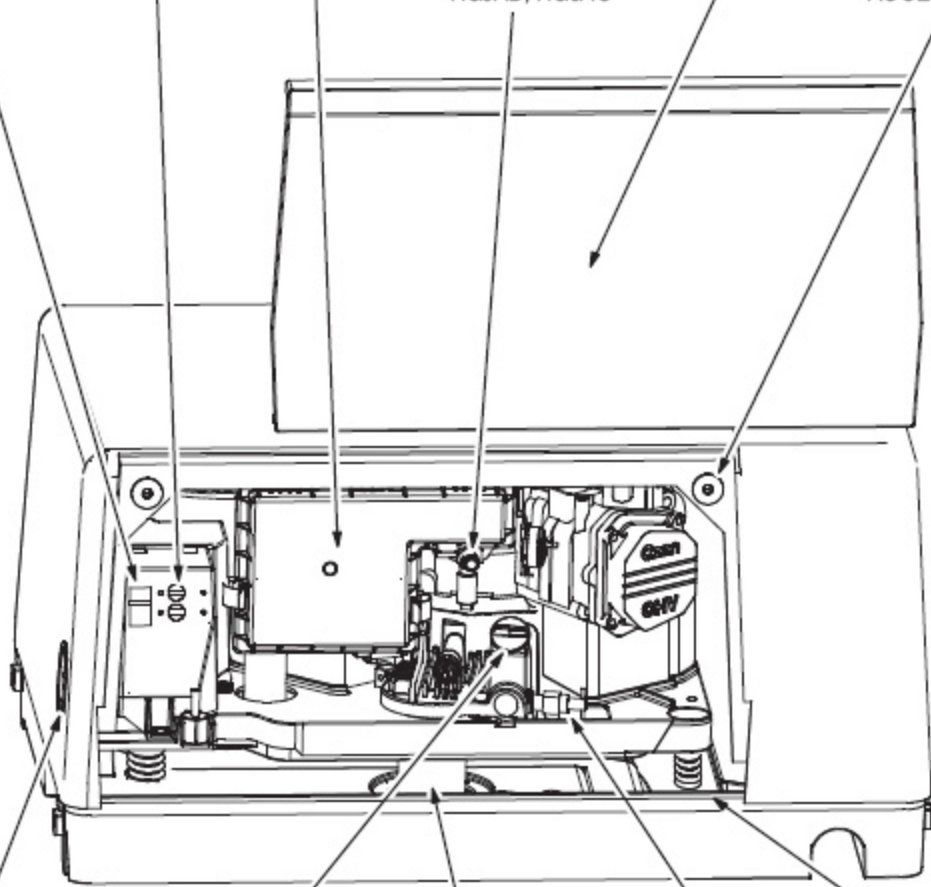

BATTERY CABLE &
REMOTE CONTROL
WIRING ENTRANCE

OIL FILL CAP &
DIPSTICK

OIL FILTER
(ACCESS BELOW)

OIL DRAIN
VALVE
(EXIT BELOW)

EDGING MUST LIE
FLAT ON EDGE OF
BASE TRAY